


Titre:	Quick install USB drivers		
Réf:	SC-20160524-02 VERSION: 01		
Created	BLA 20160524-02	Validated	CBR 20160524

USB driver installation for the communication cables provided by HYDREKA

Different communication cables are provided by Hydreka but the driver is the same:

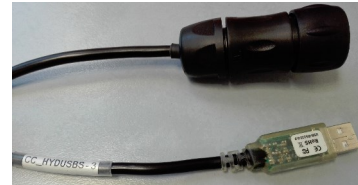


**It is imperative to be administrator of your computer to install the driver.
If not, contact your IT department.**

[If you have an internet access:](#)

Click on the link : [DRIVER USB FTDI](#), then save it in the folder of your choice (Desktop for example)

Run this file "As administrator" (Right click) and follow the installation procedure.

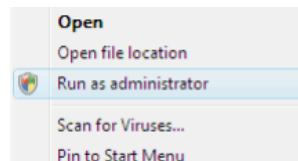

[If you don't have an internet access but Winfluid software installed on your computer:](#)

The installation file is present in the Winfluid directory:

By default C:\Winfluid\Drivers\Driver FTDI CDM 2.12\CDM v2.12.00 WHQL Certified.exe

Run this file "As administrator" (Right click) and follow the installation procedure.

COMMUNICATION PORT NUMBER ASSIGNED TO THE USB CABLE:

Before trying to connect with Hydreka software (Winfluid/HydrINS/MainFLO) to your logger/sensor, it is necessary to check the COM port number assigned by Windows

To do that, go to the Device manager, then "Ports (COM & LPT).

The USB cable will be identified as the picture below: (In this example COM3, then select this number in Hydreka software)

